



SN 611 KIT

1



## Power Supply

Connect to 8-32 VDC Power Supply, ideal to fuse box on vehicle. Connect to fuse that always has power or directly to battery. Connect red wire to fuse and black to ground.



2

## Verify Power

The **red** LED flickers fast when the terminal is searching for cellular network, it flickers intermittently when the terminal has registered the cellular network successfully.  
The **blue** LED flickers fast when the terminal is searching for the GPS satellite signal, it flickers intermittently when the terminal has searched the satellites and can be positioned.

